



REAR DOOR CARRIER

Mercedes-benz Sprinter
passenger side

BUILT FOR ADVENTURE.
ENGINEERED FOR STRENGTH.



INSTALL TIME
1-2 HOURS



RECOMMENDED
2 PEOPLE



NO DRILLING REQUIRED
WRENCH OPERATION

BEFORE YOU BEGIN



IMPORTANT SAFETY INFORMATION



Please read all instructions carefully before installation.



Before starting, please ensure that all parts are in place.



Improper installation may result in vehicle damage or personal injury.



Before each trip, check all installation points and fasteners.



If you are not familiar with vehicle modifications,
it is recommended to have a professional install it.

COMPATIBILITY

COMPATIBLE WITH:

- ✓ Mercedes-Benz Sprinter
- ✓ 2019+Models
- ✓ 180°Rear Door Hinges


NOT COMPATIBLE WITH

- ✗ Factory 270° Hinges


Vehicles equipped with 270°
hinges must be converted to
180° hinges before installation

PACKAGE CONTENTS


(Before installation, please check that all accessories in the packaging are complete.)

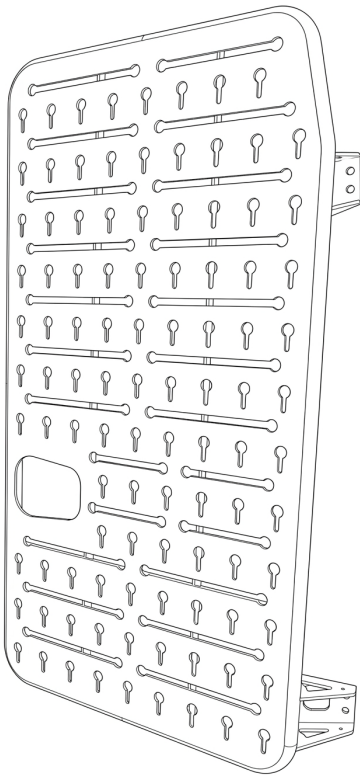


A1

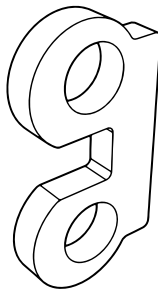

A2

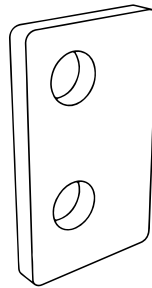


A3

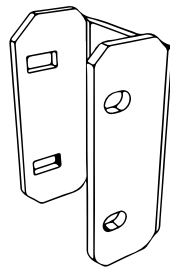


A4

QTY 4

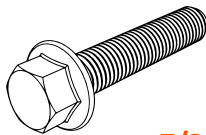


3/8-35
Hex
Flange Screws

QTY 4




3/8
Locknut

QTY 4

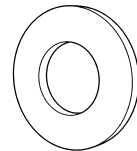


3/8
Flat Washers

QTY 2

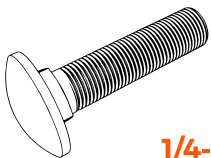


1/4-25
Carriage Bolts

QTY 2



1/4
Locknut

QTY 2

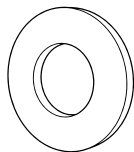

1/4
Flat Washers

Fix the product onto the rear door of the RV.

(Please note that during this installation process, it is not necessary to fully tighten the screws. However, you will need to fully tighten them after installation.)

1

Remove the Mercedes logo from the right rear door of the caravan
(make sure to keep the removed screws intact as they will be needed later).

2

Install the rubber gasket onto the
two hinges of the right tailgate.
(Align with the holes.)

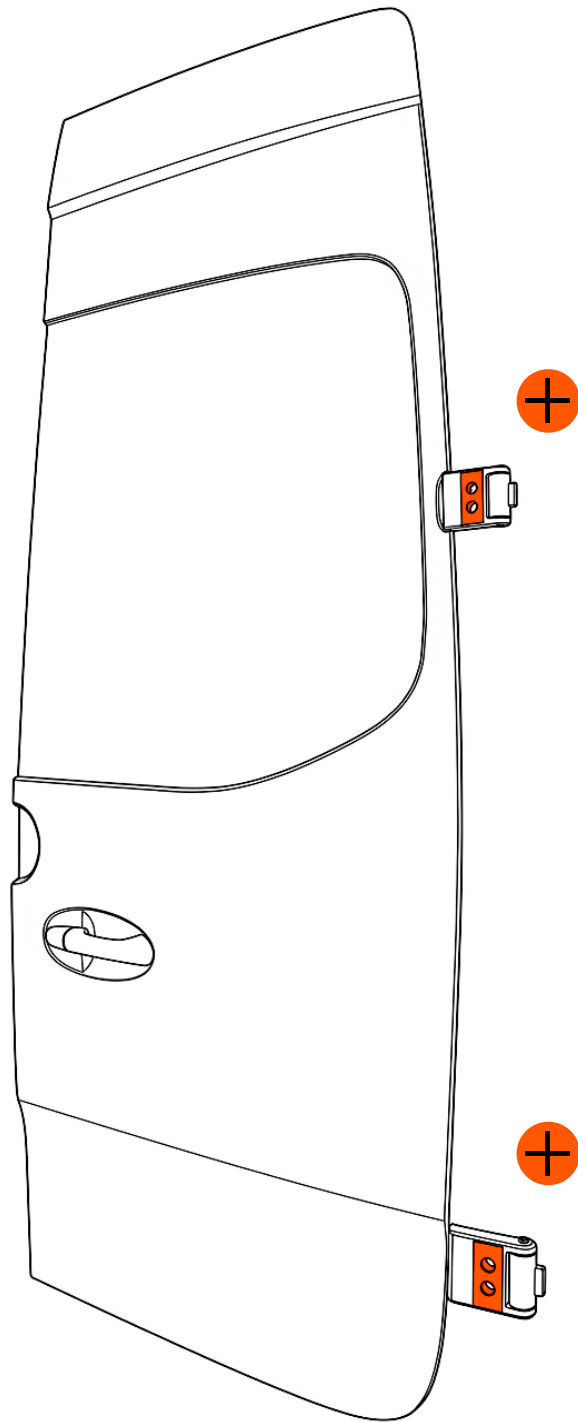


FIG 01

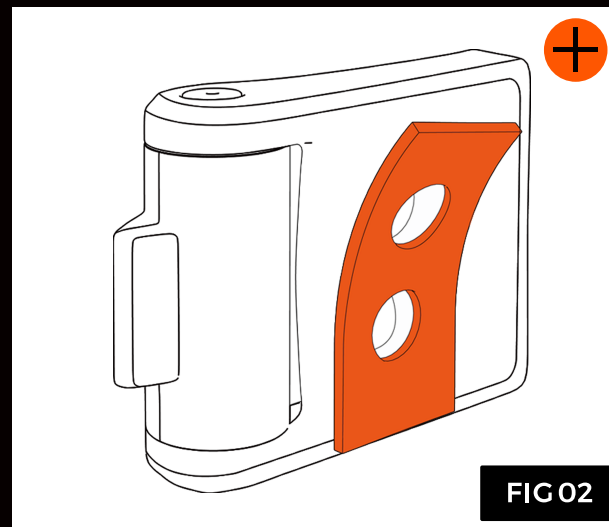


FIG 02

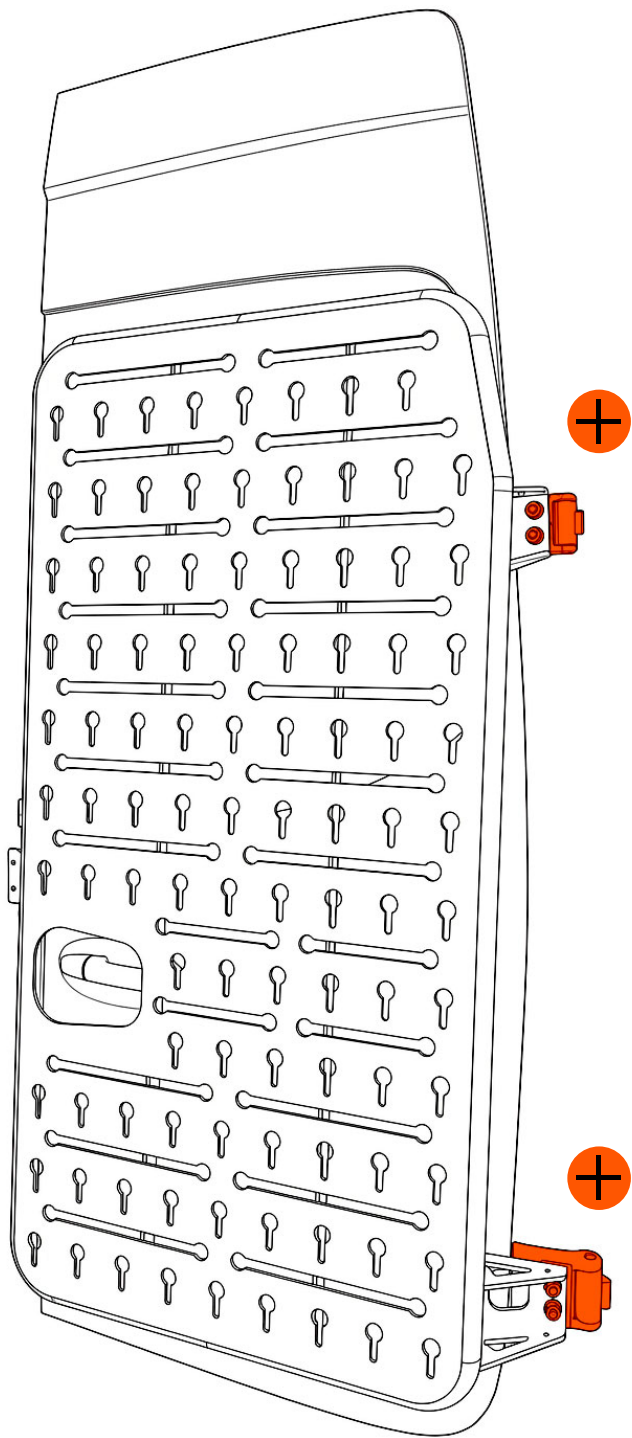


FIG 03

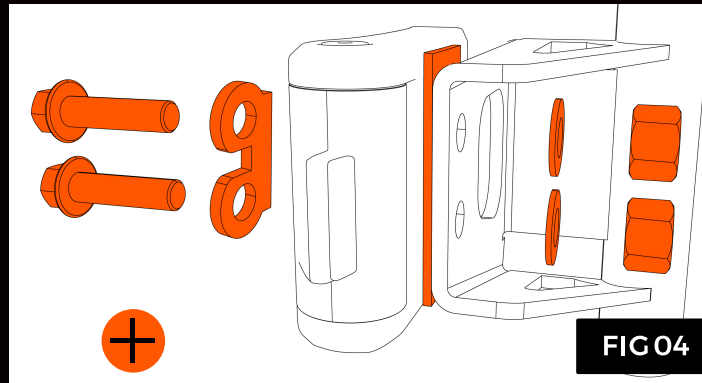


FIG 04

3

Use 3/8 - 35 Hex Flange Screws, 3/8 Locknuts, 3/8 Flat Washers and A2 to fix the right upper side of A1 to the right upper side of the vehicle tail by means of a hinge connection.

4

Use 3/8 - 35 Hex Flange Screws, 3/8 Locknuts, 3/8 Flat Washers and A3 to fix the right lower side of A1 to the right lower side of the vehicle tail by means of a hinge connection.

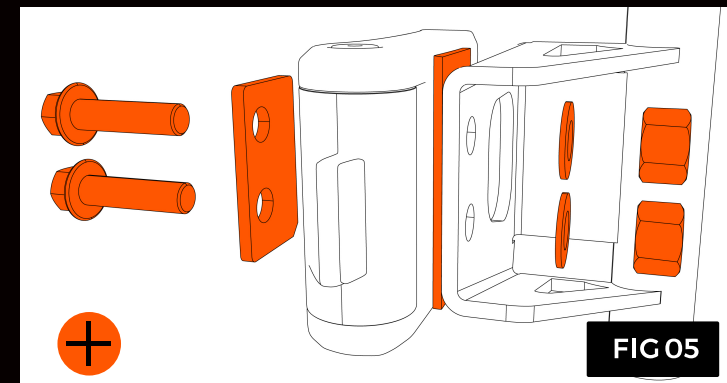


FIG 05

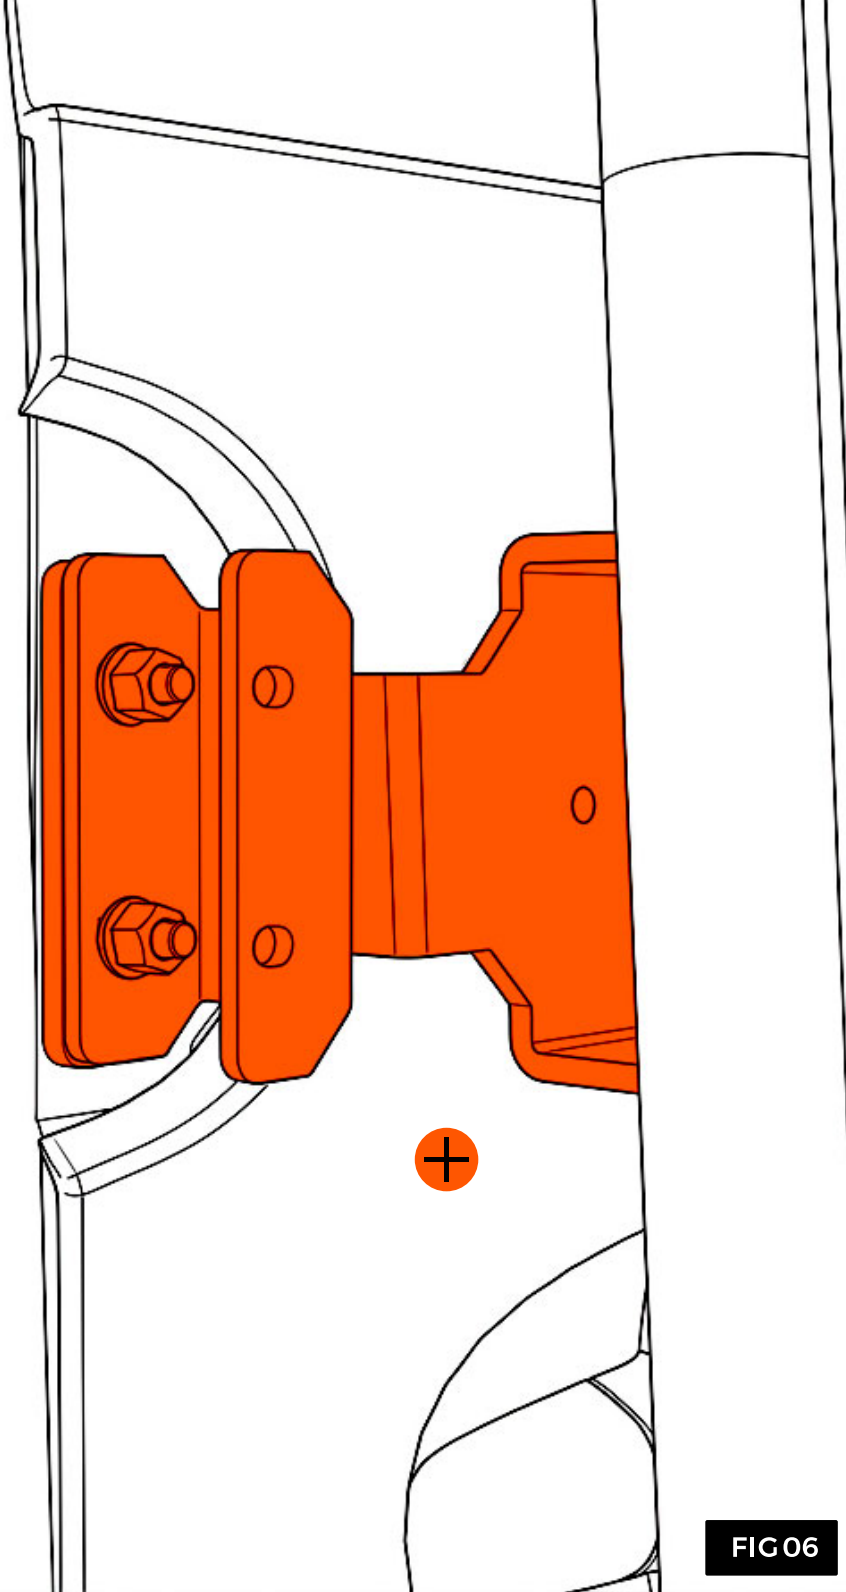


FIG 06

5

At the position where the original RV tailgate emblem was installed, use 1/4-25 American carriage screws, 1/4 locknuts, and 1/4 flat washers to secure the product bodies A1 and A4 to the RV tailgate.

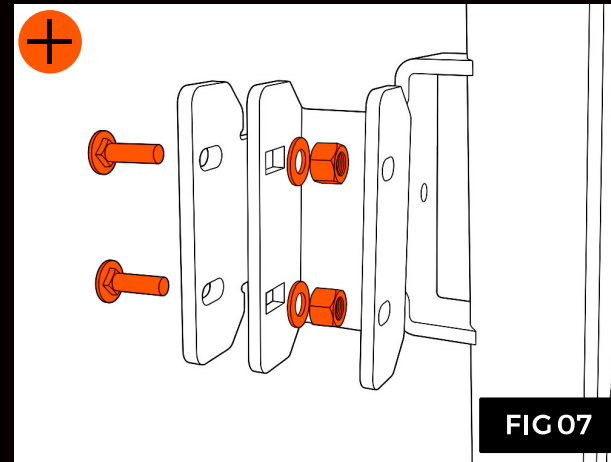


FIG 07

The positional relationship between the parts and the screws is shown in the figure.

6

Fix the van logo onto part A4 using the original screws.



NEED HELP?



support team:
support@vanncamp.com

SHARE YOUR BUILD



Tag us on Instagram
[@vanncamp](https://www.instagram.com/vanncamp)
and share your adventures!