
Van N Camp

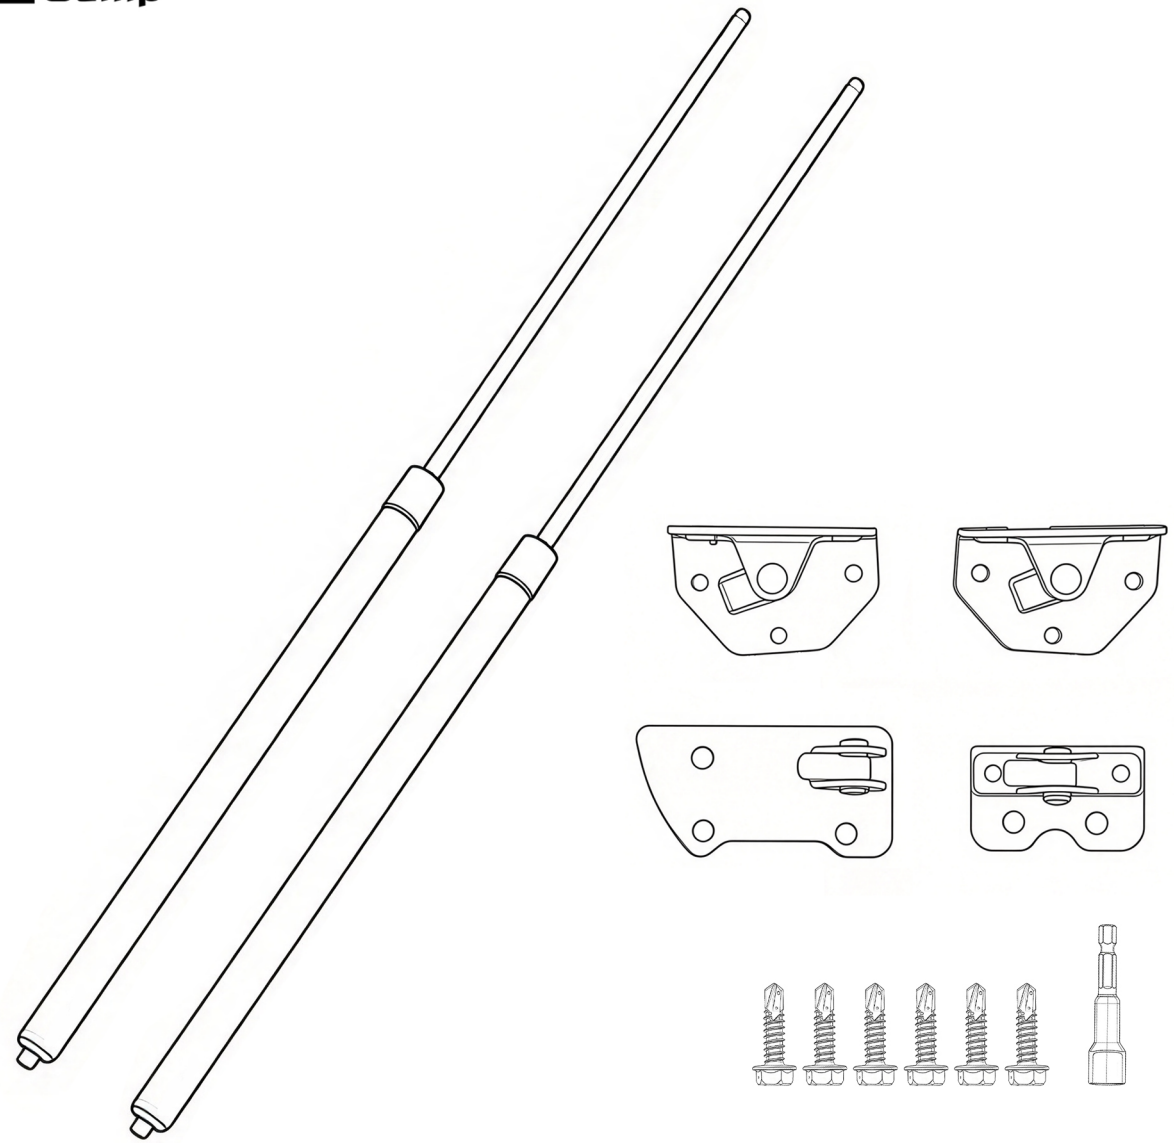

REAR DOOR GAS STRUT KIT

SPRINTER VAN Rear Door

Gas Strut Kit

BUILT FOR ADVENTURE.

ENGINEERED FOR STRENGTH.

INSTALL TIME
15 MIN

RECOMMENDED
2 PEOPLE

POWER DRILL
REQUIRED


BEFORE YOU BEGIN

IMPORTANT SAFETY INFORMATION


- Please read all instructions carefully before installation.
- Before starting, please ensure that all parts are in place.
- Improper installation may result in vehicle damage or personal injury.
- Before each trip, check all installation points and fasteners.
- If you are not familiar with vehicle modifications,
  it is recommended to have a professional install it.

PACKAGE CONTENTS

(Before installation, please check that all accessories in the packaging are complete.)

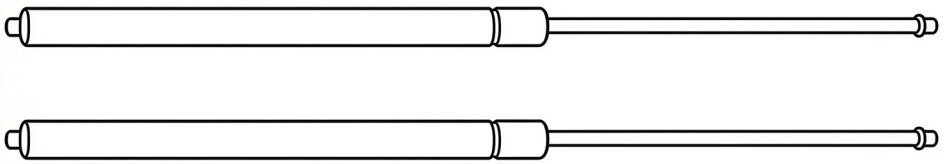


A1

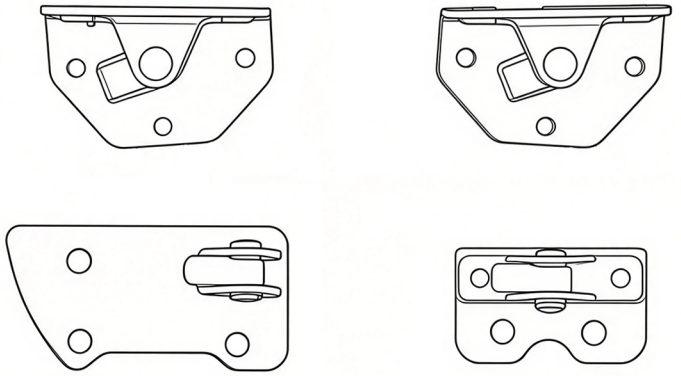

(Driver Side) (Passenger Side)


A2

QTY6

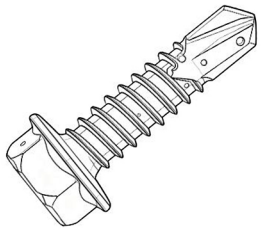

Φ6.3*25mm


Hex Head Self-Tapping Screw

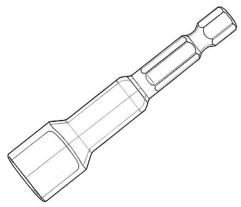


Nut Driver Bit

HOW TO INSTALL


Make sure to check and tighten the screws at the end.

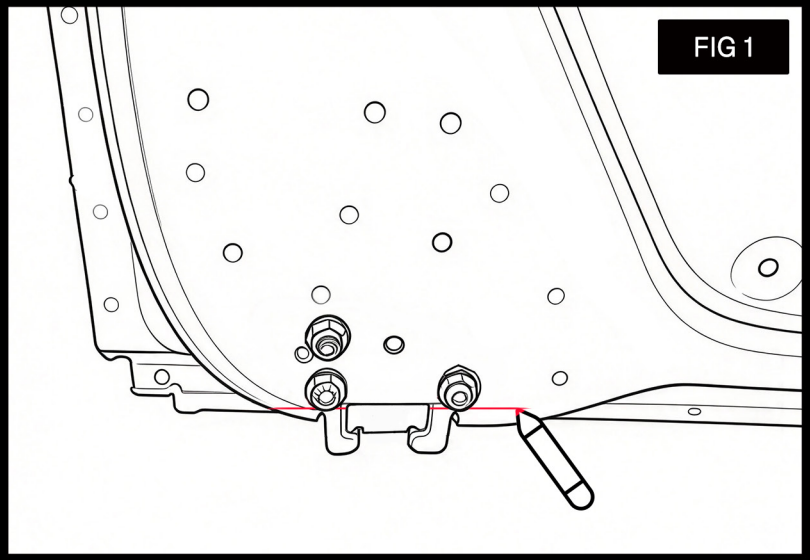


1. Mark the original position of the rear door latch as shown.

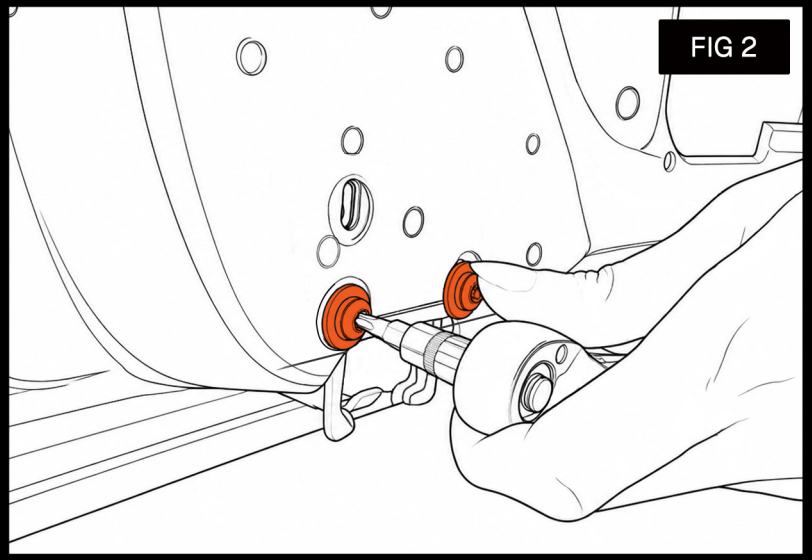

2. Remove the factory bolts.

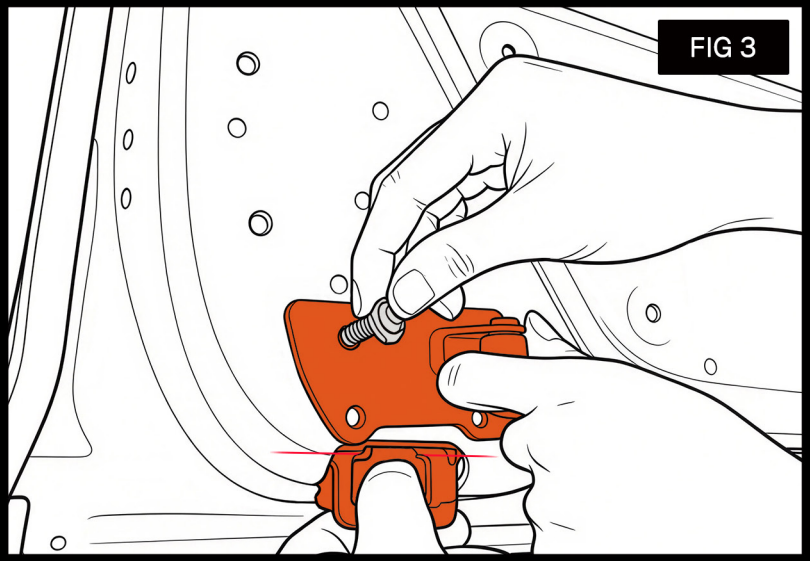

3. Install the door-side bracket (A2), aligning the rear door latch with the mark.

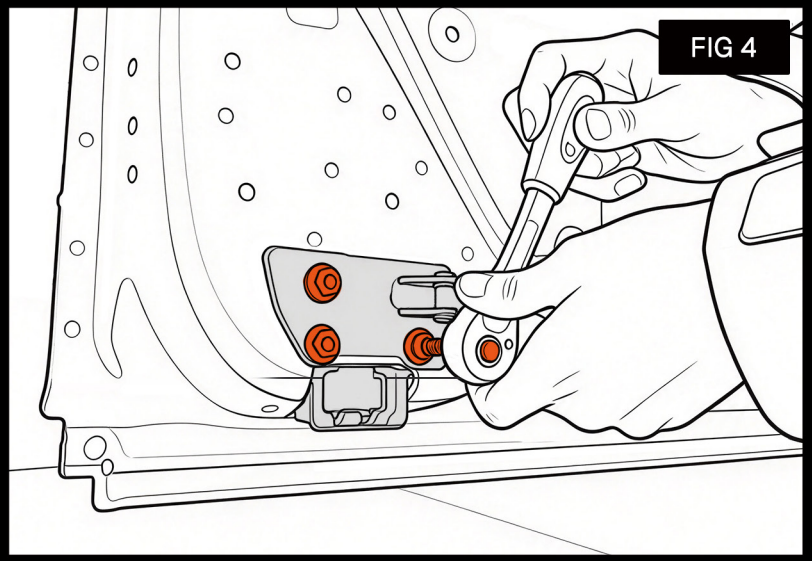


4. Tighten the bolts to secure the bracket.

HOW TO INSTALL


Make sure to check and tighten the screws at the end.




Φ6.3*25mm*6
Hex Head Self-Tapping Screw

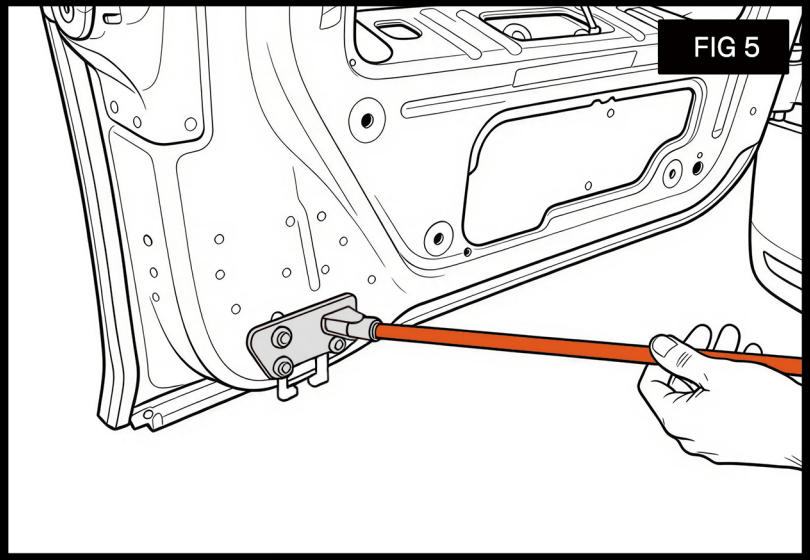


5. Attach the gas strut to the door-side bracket (A2).

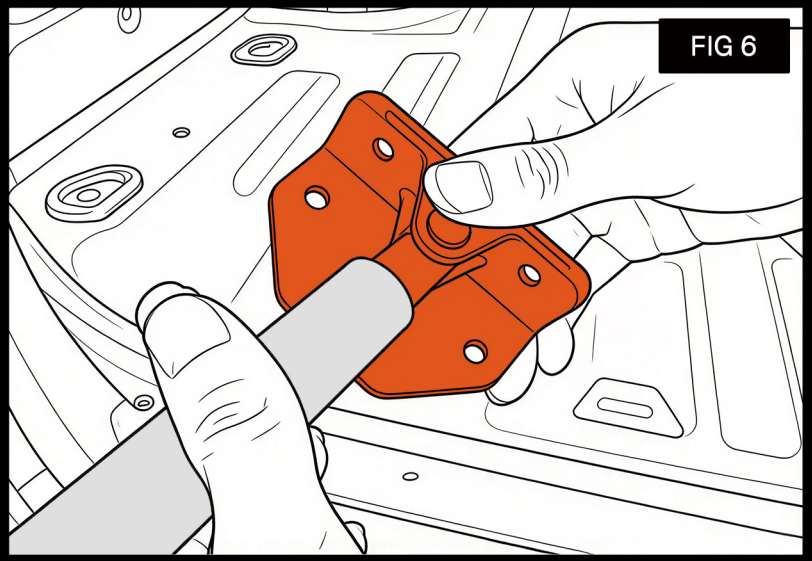

6. Attach the other end of the gas strut to the second bracket (A2).

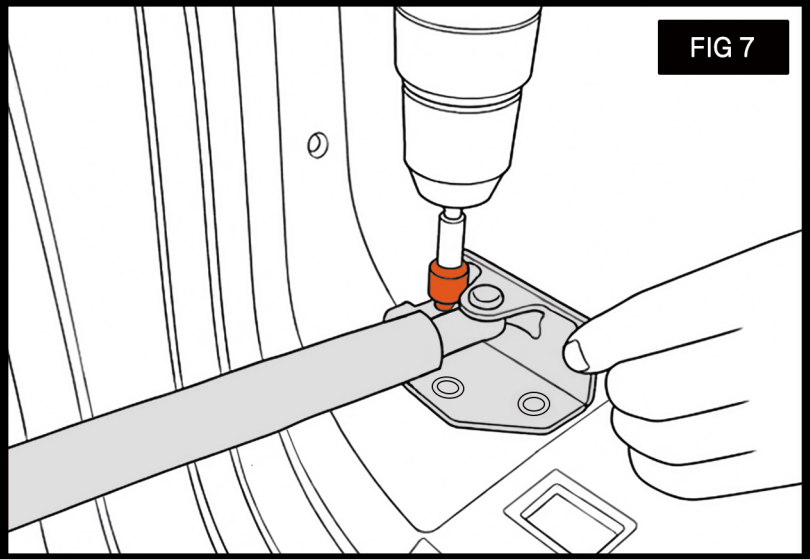

7. Use a socket to tighten the Hex Head Self-Tapping Screws and secure the bracket (A2).

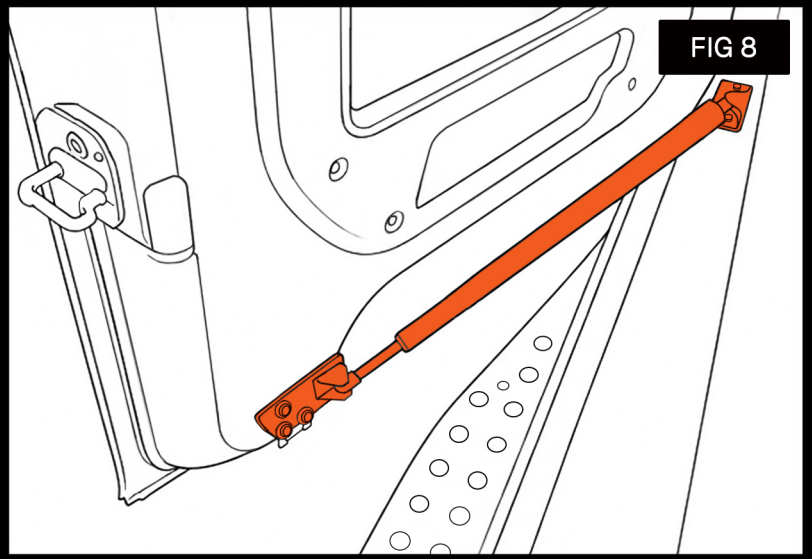

8. Installation on this side is complete. Repeat the same steps on the other door.



NEED HELP?

support team:
support@vanncamp.com

SHARE YOUR BUILD

Tag us on social media @vanncamp
and share your adventures!